




RS-232




TXD
RXD
GND

RXD
TXD
GND

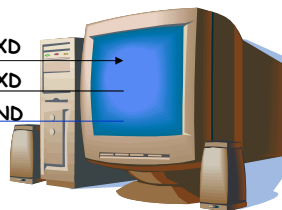

Pinos da ficha DB9 no PC

- 2 Receive data (RXD)
- 3 Transmit data TXD
- 5 Ground (GND)



PC - RS - 232

DB9 -




RS-232



TXD
RXD
GND

RXD
TXD
GND

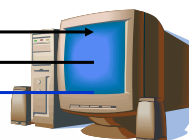

1 -> +5Volt
0 -> 0Volt

1 -> -12Volt
0 -> +12Volt

